


SPORTS IMPORTS INCORPORATED

SETTING UP THE SENOH VOLLEYBALL SYSTEM


1. Lift the hinged brass floorplate and insert the volleyball uprights into the sleeves. The upright should be positioned with the stop pin parallel to the court sideline and the permanent upright hooks and pulley wheel in line with the net. The upright should slide into the sleeve and rest with the rubber end plug sitting on the sleeve bottom.
2. Attach the heavy duty net ratchet to the upright using the two enclosed steel bands and associated hardware. (See other side.) If you have purchased the SENOH SP3 safety padding, refer to those set-up instructions for the proper location of the net ratchet. Ratchet should be attached to upright so that the bottom is 33½" above the playing surface when upright is properly situated in the ground sleeve for game play.
3. Spread the net out on the floor between the uprights noting that the top cable has one factory loop and one end with just a metal tip (HM50 net). The VP2032S has two factory loops with one being larger. Raise the telescoping portion of the upright to the desired height, insert the stop pin completely through the upright and rotate to lock in place (DE10 Uprights are raised by inserting handle and cranking to desired height). The uprights are now set at competition heights and will be reflected via the inscribed numbers/letters on the telescoping portion of the upright (Fig. B). The men's height is 43 (M on AL7) and the women's height is 24/25 (W on AL7). These numbers/letters will be visible just above the outer red portion of the upright.

4. Spread the net between the uprights using the pulley wheels to direct the top cable factory loop to attach to the static hook on the non-ratcheted upright and via a slip knot on the non-looped end attach to the spindle hook of the ratchet. Be sure that the top cable remains in the pulley wheel during this process, as it may pop out of the pulley wheel early in the tensioning process. The ratchet will have a removable handle that will insert into the ratchet to crank the net tight. Turn the handle to achieve the tension and continue until the top cable is straight and there is no visible sag.

Fig. B

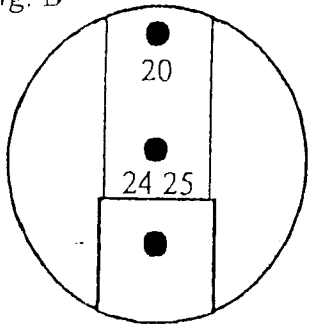

Women's
(W on AL7 uprights)

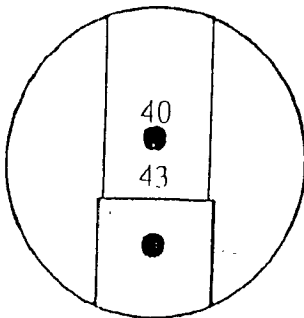


Men's
(M on AL7 uprights)

5. The bottom rope will utilize the NL2 net locks to achieve bottom tension. Please follow the enclosed directions. Additional tension can be achieved via the three side ties on each side of the net. You can also purchase a wooden dowel rod that will slide into the pocket at each end of the net. The antennae should be positioned after the net tension is finalized.

6. The uprights are designed to flex slightly off the vertical and when the net is properly tensioned a visible flex is apparent and should be expected.

7. Should you have any questions on the set-up and use of the SENOH system, please call us toll free at 800-556-3198.

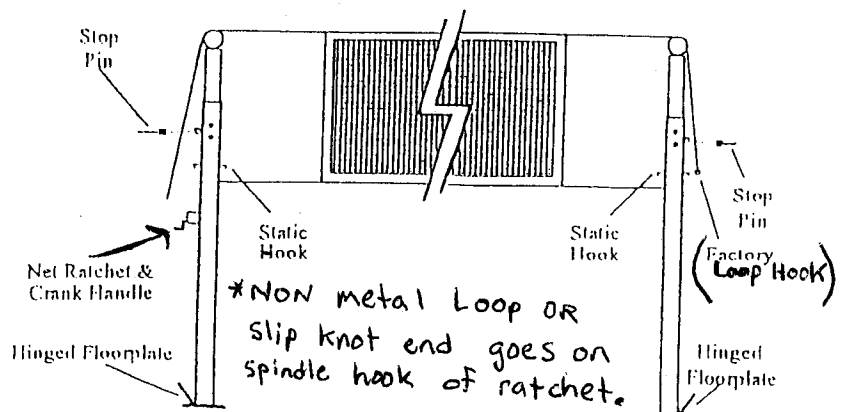




SPORTS IMPORTS
your source for Senoh

Model: Senoh NA2 Net Antennae

Official FIVB Net Antennae

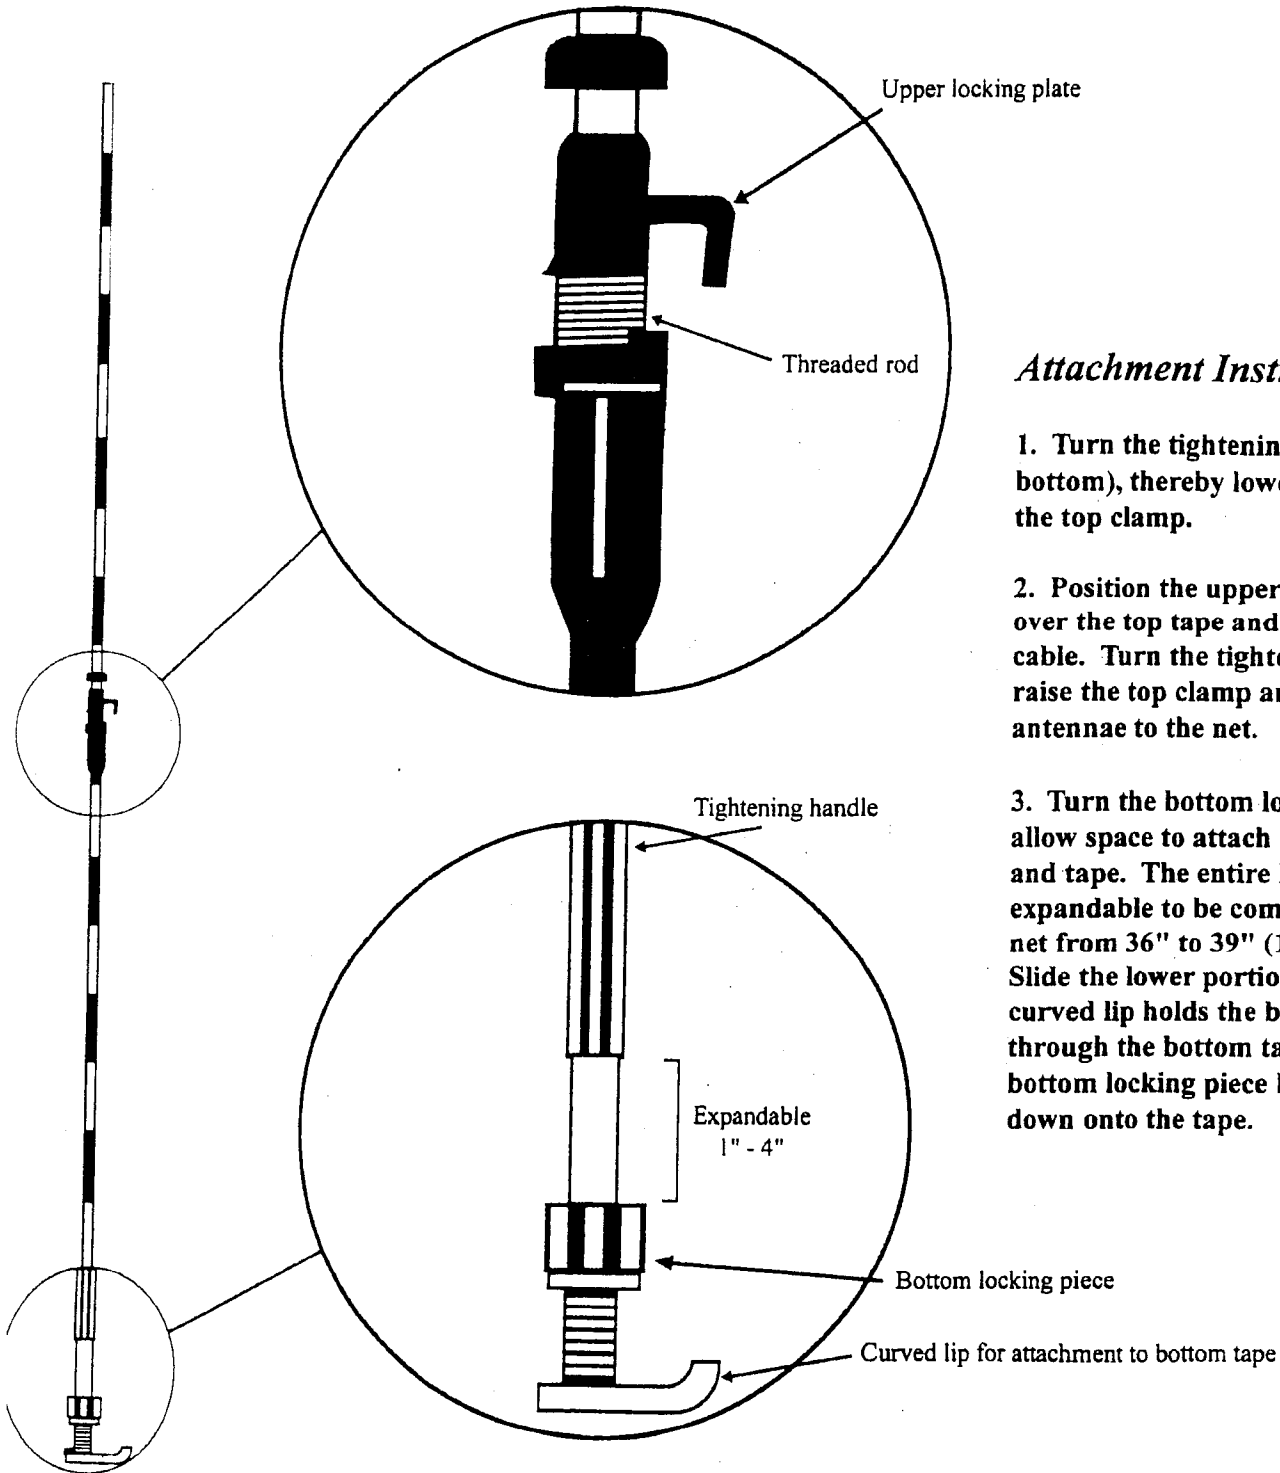

Attachment Instructions

1. Turn the tightening handle (at bottom), thereby lowering/opening the top clamp.
2. Position the upper locking piece over the top tape and hook on the net cable. Turn the tightening handle to raise the top clamp and lock the antennae to the net.
3. Turn the bottom locking piece to allow space to attach to bottom cable and tape. The entire lower portion is expandable to be compatible with any net from 36" to 39" (1 meter). Slide the lower portion up so that the curved lip holds the bottom cable through the bottom tape. Tighten the bottom locking piece by turning it down onto the tape.